

BMS koppelen

61		Info Mode	The Screen will show the hardware and software version of the EMS, BMS and Modules 101 means EMS 102 means BMS 1~8 means module 1~8	1) only works on Gen3 BMS
62		BMS Detection mode	Let the master BMS detect how many BMS is installed	1) detection may take up to 1 min 2) please wait for at least 25 seconds before changing back to normal mode, otherwise it won't be affected.
63		Module Detection mode	Let the BMS detect how many modules is installed	1) detection may take up to 1 min 2) please wait for at least 25 seconds before changing back to normal mode, otherwise it won't be affected.

